



SPOT GPS Tracker – Cheat Sheet

1. Press **POWER** button until it blinks green.
2. Press **OK** button until it blinks green - press at start and end of trip, and at two hourly intervals on bitumen.
3. When driving on dirt roads, press **FOOTPRINT** button until it blinks green.
4. Press **HELP** or **SOS** for assistance to be sent to that GPS location - follow up with phone call if possible.

Tips:

- Place SPOT on sun visor or dashboard facing you so you can see the lights and can reach the device from your seat if necessary.
- Press OK button 2-3 km before your destination to allow time for message cycle to complete - check confirmation as per note below.
- Lights: To activate or de-activate a function, press and hold button for 2-3 seconds until light starts/stops blinking. Note: Using sharp objects such as pens will damage the buttons.
- Messages Sent Confirmation: When SPOT has GPS location and OK message is sent, both GPS and MESSAGE lights will blink green for 15 seconds, MESSAGE will continue to blink green for another hour.
- Priorities: Activating FOOTPRINT (Track Progress button), HELP or SOS will disable unsent OK messages and will send automatic timed messages.

A copy of the WACHS SPOT Tracker Reference Guide is in the vehicle glovebox if additional user information is required.

<p>GPS Green: searching for GPS signal Red: GPS location fix failed –move to clearer view of sky</p>		<p>MESSAGE Green: Transmission schedule in progress Red: Last message was not sent</p>
<p>POWER Green: Device on Red: Low battery All Red: Equipment failure</p>		<p>SOS ** Press for life-threatening emergencies</p>
<p>HELP * Press for non-urgent help</p>		<p>FOOT PRINT Press once to send automatic message with GPS location every 10 minutes while activated</p>
<p>OK Press to send OK message with GPS location</p>		<p>CUSTOM MESSAGE is not used</p>

*** HELP**

If SPOT is unable to determine a GPS location after 4 minutes, it will send a message without the GPS location - the GPS light will blink red and the MESSAGE light will blink green together for approximately 15 seconds when the message is sent. SPOT will continue to send messages every 5 minutes for an hour, and continue to seek GPS location for up to 4 minutes.

To cancel, press and hold until the HELP light blinks red - leave SPOT on until HELP stops blinking red - the MESSAGE light will blink green indicating it has sent the Cancel message.

**** SOS**

SPOT will send a message within one minute after activation, with or without a GPS location - the GPS light will blink red and the MESSAGE light will blink green together for approximately 15 seconds when the message is sent. SPOT will continue to send messages every 5 minutes until cancelled or batteries fail, and continue to seek GPS location for up to 4 minutes for all subsequent messages.

To cancel, press and hold until the SOS light blinks red - leave SPOT on until SOS stops blinking red - the MESSAGE light will blink green indicating it has sent the Cancel message.

This document can be made available in alternative formats on request for a person with a disability

Contact:	WACHS Work Health and Safety Manager (K.McClean)		
Directorate:	Workforce	TRIM Record #	ED-CO-17-18584
Version:	1.00	Date Published:	7 April 2017

Copyright to this material is vested in the State of Western Australia unless otherwise indicated. Apart from any fair dealing for the purposes of private study, research, criticism or review, as permitted under the provisions of the *Copyright Act 1968*, no part may be reproduced or re-used for any purposes whatsoever without written permission of the State of Western Australia.